



*Thinking of you*  
**Electrolux**



EDS6051

.....  
TUMBLE DRYER

.....  
USER MANUAL



# Contents

## Important Safety Instructions

- Dryer Safety .....	Page 2
- Fire Hazards .....	Page 2
- Cleaning the Lint Filter .....	Page 3
- Drying Guide .....	Page 3

Installation Instructions .....	Page 4
---------------------------------	--------

## Use

- The Control Panel .....	Page 6
- Operating Sequence .....	Page 7

<b>Care And Cleaning</b> .....	Page 9
--------------------------------	--------

<b>Hints</b> .....	Page 10
--------------------	---------

<b>Troubleshooting &amp; Accessories</b> .....	Page 11
--	---------

<b>Warranty</b> .....	Page 15
-----------------------	---------

# Important Safety Instructions

 
## DRYER SAFETY

Failure to follow these safety instructions could damage the dryer or your clothes.

**You may then not be covered by warranty for this damage.**

Only plug this appliance directly into an AC power supply, which is properly earthed and has the correct voltage.

See the serial number sticker located on the bottom of the door opening for voltage information.



**CAUTION:** If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture. For safety reasons we strongly advise against the use of double adaptors, extension cords or power boards.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

### IMPORTANT:

- If the electrical cord of this appliance is damaged, it must be replaced by the Manufacturer, Authorised Service Agent or similarly qualified person in order to avoid a hazard.
- These dryers are for drying clothes, towels and linen at home. Do not use them for any other purpose.
- Lint must not be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.

**WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

## FIRE HAZARDS

Some fabrics are not suitable for tumble drying. The following **MUST NOT** be placed in your dryer due to the risk of a fire or an explosion:

- Items that have been spotted or soaked with **vegetable oil, cooking oil, suntan oil, linseed oil, salad oil, lubrication oil or grease**. Oil affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If heat cannot escape, the items can become hot enough to ignite. Piling, stacking, or storing oil-affected items can prevent heat from escaping and create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil, or have been contaminated by hair care products be placed in a tumble dryer, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate the hazard.

The final part of a tumble dryer cycle occurs without heat (cooling cycle) to ensure that the items are left at the temperature that ensures that the items will not be damaged.

- Items that have previously been cleaned in, washed in, or spotted with **petrol/gasoline, industrial chemicals used only for cleaning, dry-cleaning solvents or other flammable or explosive substances are highly flammable. Highly flammable or explosive commonly found around the house include acetone, (nail polish remover) denatured alcohol, petrol/gasoline, kerosene, some spot removers, turpentine, waxes and wax removers should not be put in the dryer. Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials. Foam rubber materials can produce fire by spontaneous combustion when heated.**
- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, rubber boots and rubber-coated sports shoes.

For your safety, and to reduce the risk of fire or an explosion, **DO NOT store or use petrol or other inflammable vapours and liquids near your dryer.**



# Important Safety Instructions

## CLEANING THE LINT FILTER


### LINT BUILD-UP IS A FIRE HAZARD

A clean lint filter reduces drying time, saves energy and avoids overheating. Overheating may also damage your clothes.


**What happens if I forget to clean the lint filter?**

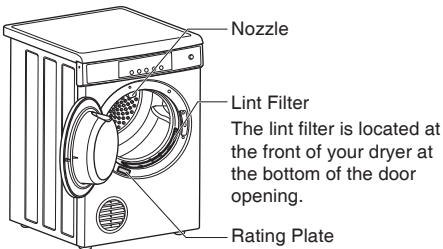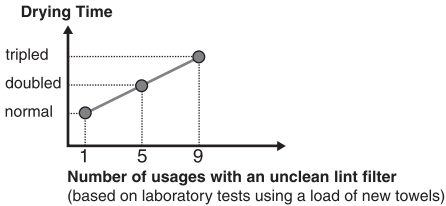

**You must clean this lint filter after every load.**

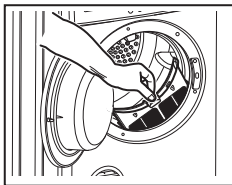

To remove the lint filter open the door and press the two pads together. Pull the lint filter out of the pocket.

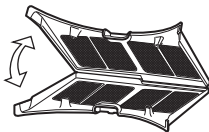

Open apart the lint filter and wipe or peel off the lint.

Ensure the lint filter "clicks" when replacing. It can be inserted into the pocket either way.

- Never operate your dryer without the lint filter.
- Do not allow lint to build around your dryer.
- A torn or damaged lint filter must be replaced immediately.
- Overloading can increase lint build-up because the airflow is reduced.

**To avoid potential fire hazards, we recommend that you pay a qualified service technician to periodically clean your dryer.**

## DRYING GUIDE

Your load, when dry must not exceed the rated capacity.

- 6 kg for the EDS6051 dryer

(See page 10 for a table of average weights of laundry items)

Always check your labels for the drying symbols which the International Care Labelling Code now uses.



- **Permanent press and synthetics** - take out as soon as the dryer stops to reduce wrinkles.
- **Woolen articles** - not recommended. Pull them to their original shape, then dry them flat.
- **Woven and loop knit materials** - may shrink, by varying amounts, depending on their quality. Do not use the "Normal" setting for these fabrics. Always stretch them out immediately after drying.
- **Fibre or leather materials** - always check the manufacturer's instructions.
- **Baby clothes and night gowns** - acrylic clothing or sleepwear use only on the "Delicates" setting.
- **Rubber and plastics** - Do not dry any items made from or containing rubber or plastics, such as aprons, bibs, babies' waterproof napkins, curtains, tablecloths, shower caps, clothes fitted with foam rubber pads, pillows, galoshes, or rubber coated tennis shoes.
- **Fibreglass** - not recommended. Glass particles left in the dryer could be picked up by your clothes the next time you use the dryer, and irritate your skin.

Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.


**Note: We strongly advise against the use of fabric conditioners of the sheet type that are added to the clothes in the drum. These products may lead to rapid blockage of the lint filter and inefficient operation of your dryer.**

# Installation Instructions


You can choose to put your dryer:

- on the floor.
- on a work bench.
- on top of a front load washing machine using a stacking kit available as an optional extra (not available for all washing machine models).

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer in such away that a full opening of the tumble dryer door is restricted.

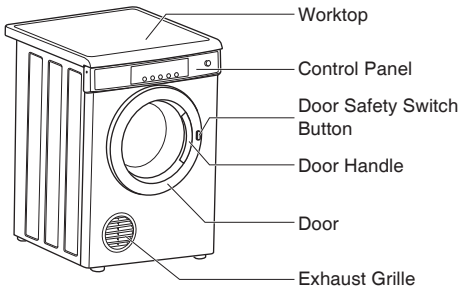

The exhaust grille has a range of positions, which allows you to select the optimum exhaust air angle. Simply hold the grille and rotate it until it hits the built-in stop.

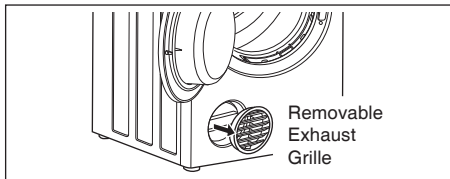

**Do not install your dryer in a cupboard or small un-vented laundry unless you are using a venting kit.**

There are 2 VENTING OPTIONS


- front
- rear-using a venting kit (optional extra)

## Venting Kit (Optional Extra)


DVK005 - Through the wall  
DVK006 - Universal flexible hose

**Important:** Use only kits approved by Electrolux Home Products Pty. Ltd. with your dryer. Contact the Electrolux Home Products Pty. Ltd. Spare Parts Centre for the list of approved kits. The exhaust duct must not exceed 2 metres in length at 100mm diameter. If connecting the dryer to a common ducting system, safety advice should be requested from the manufacturer.

If you choose to use the optional vent kit, the exhaust grille at the front of the dryer will need to be replaced with the outlet cover from the back of the dryer. Gently prise open the grille, using a thin bladed tool. Next, remove the cover from the back and clip it into the grille space at the front. The exhaust grille is not required when using a vent kit.

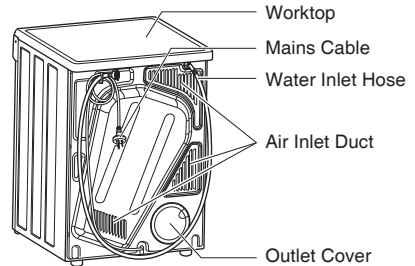

You can position the vent kit at the back of the dryer to remove air sideways.

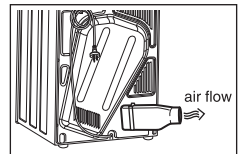

Inlet and outlet points need clear airflow to prevent overheating, so ensure there is adequate ventilation. (i.e. open window or external door.)

If a venting kit is used and the exhaust is discharged out of the room, there must be adequate ventilation to avoid the back flow of gases in to the room from appliances burning other fuels, including open fires, when operating the tumble dryer. This is not applicable where a venting hose is directed to an open window. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.


## Water Connection

Cold water tap must be installed within 110 cm of your dryer's water inlet and the tap must be 3/4 inch BSP thread for laundry hose connection. Water pressure must be between 200kpa to 800kpa.


Use the hose supplied with the dryer. **DO NOT USE OLD HOSES.**

To connect the water inlet to dryer:


1. Turn off cold water supply to washer.

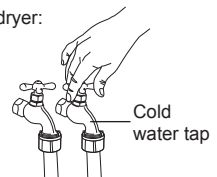


2. Remove cold inlet hose from cold water supply.

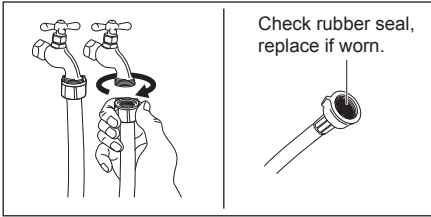

3. Turn on cold supply for a short time to run some water into a bucket or container to clear any contaminants in the line.
4. Connect the Y-Connector to the cold water tap.

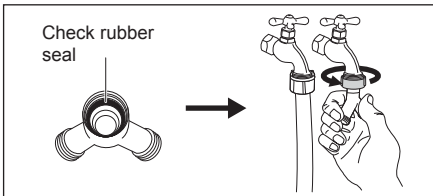


5. Connect the cold inlet hose for the washer and the dryer to the Y-Connector and tighten them.

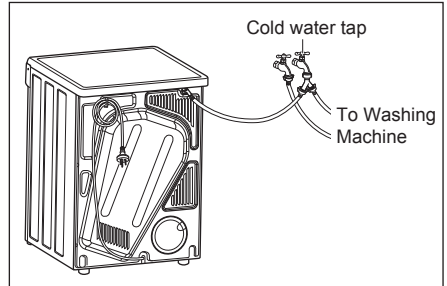

6. Turn on the water tap and check for leaks at all connection.

# Use

## THE CONTROL PANEL

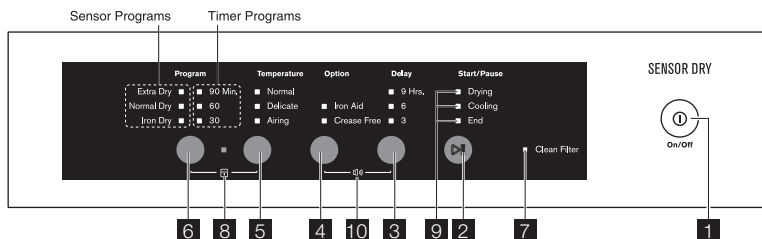

### 1 On/Off Button

This button switches the dryer on. At the end of the program, press the button again to switch the dryer off.

### 2 Start/Pause Button

This button allows you to start or pause the dryer to check the contents of the load or perhaps add more clothes to the load.

**NOTE: The dryer will not start unless the door safety button is pressed in.**

**If the safety button is not pressed in a door switch fault will be indicated ("beeps" 6 times).**

### 3 Delay Button

This button is a feature that permits you to start the dryer after a defined number of hours, ranging from 3, 6, or 9 hours.

To abort the Delayed Start, press the **Start/Pause** button, which puts the machine into paused mode, allowing you to change the delay time.

**NOTE: Make sure you have set the desired program before setting the delay.**

### 4 Option Button

This button allows you to select 2 options.

#### Crease Free:

The Crease Free feature is designed to help prevent creases forming in the clothes after the normal drying cycle has finished. The drum will rotate about 5 seconds every minute and will continue for 3 hours.

This is useful if you are unable to unload the dryer straight away.

#### Iron Aid:

This option will help in reducing wrinkles on your clean and dry clothes by using a combination of moisture and warm air function. Maximum load should not exceed 1 kg when this option is selected. This option cannot be combined with any other programs.

**i** This option should only be used to reduce wrinkles for clothes which are clean and dry. When this option is selected, all other programs will be suppressed.

### 5 Temperature Button

Is used to select one of the three settings, Normal, Delicates or Airing. The Delicates setting will cause the heater to cycle on for less time than the Normal setting.

The heater on/off cycling time will vary on both settings depending on the program selected, ambient temperature etc.

On the Airing setting the heater is not used at all. A new setting can be selected when the dryer is running, the drying process will continue using the new setting.

**NOTE: Airing cannot be selected when one of the Sensor programs has been selected.**

### 6 Program Button

Is used to select the desired program. Programs available are:

#### Sensor Programs:

Extra Dry, Normal Dry and Iron Dry.

#### Timer Programs:

90 min, 60 min and 30 min.

When a new program is selected while the dryer is already running, the drying process will continue using the settings from the new program.

**NOTE: When the temperature setting is on Airing the Sensor programs cannot be selected.**

### 7 Reminder Clean Filter LED

The LED is illuminated at the end of the program.


The LED is designed as a reminder to clean the lint filter at the end of each load.

### 8 Child Lock (🔒)

The child lock option is used to stop the settings from being changed once a program has been started.

It does not affect the On/Off switch.

To select this option press and hold the **Program** and **Temperature** button together (while the dryer is running) until a beep is heard and the Child Lock LED illuminates for approx 2 seconds. To turn the child lock off press and hold the same buttons (while the dryer is running) until a beep is heard and the LED goes off.

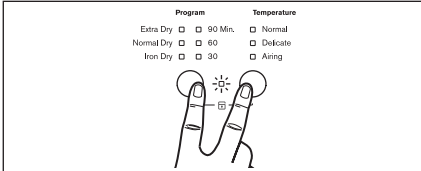

**NOTE: If the door is opened during the program the Child Lock option will be de-activated and will have to be reset once the dryer has been restarted.**

## 9 Progress indicator lights


These indicators show at which part of the cycle your machine is, the Drying or Cooling cycle or the End.

## 10 Buzzer (🔔)

The Buzzer feature is designed to remind you when the program ends with a “beeps” sound.

To activate this option press and hold the “**Option**” and “**Delay**” buttons simultaneously until a long beep is heard.

To deactivate press and hold the same buttons until a short beep is heard.

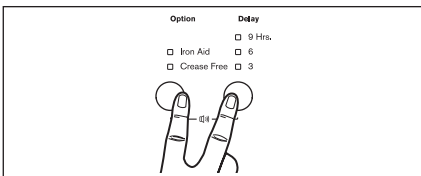


## OPERATING SEQUENCE

- 1. Load your dryer loosely until it is no more than TWO THIRDS FULL.** Clothes must tumble freely in a dryer. Don't cram them in. Wet clothes fluff up when dry.


### Overloading will:

- Reduce efficiency
- Increase drying time
- Increase the risk of creasing

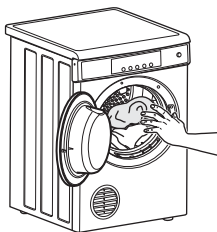

**Do not load clothes or other articles which are dripping wet or have sand and grit on them into your dryer.**

- 2. Switch On**  
The dryer will not operate unless the door safety switch button is fully pressed in.

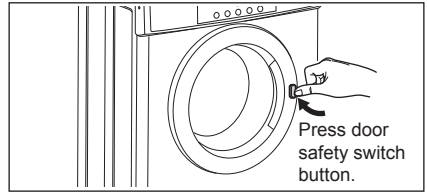

- 3. Press** then release the **On/Off** button on the sensor control panel. You are now ready to select your drying Program.


You can use your dryer 2 ways

1. Sensor Program
2. Timer Program

### 3.1 Sensor Program

 This mode gives you the option of selecting different drying levels from the **Sensor Program**.

1. Press the **Program** button to select either **Extra Dry**, **Normal Dry** or **Iron Dry** from the **Sensor Program**.




The indicator light will come on to your choice.

Do not select the **Extra Dry** option for delicates fabric such as polyester as shrinking may occur.

To obtain the best drying results with small loads it is recommended to use Extra Dry program.

 2. Press the **Temperature** button to select either **Normal**, or **Delicates** from the **Temperature program**.



**Airing** is not available in **Sensor Program**.

The indicator light will come on to your choice.

Refer to the table below for recommendations.

Temperature	Definition
<b>Normal</b>	For drying most fabrics.
<b>Delicates</b>	For drying delicates and synthetics at lower heat for maximum care of the fabrics. The Delicate setting will cause the heater to cycle on for shorter time than the Normal setting.
<b>Airing</b>	This setting does not heat. Only circulate the air as the dryer to shake out the dust and refresh the clothes.


Now press the **Start/Pause** button to start the dryer.

### 3.2 Timer Program

 Using this mode gives you the option of selecting a number of features from the **Timer Program** including the Temperature you require.


1. Press the **Program** button to select either **90, 60 or 30** Minutes from the **Timer Program**.

The indicator light will come on to your choice.



2. Press the **Temperature** button to select either **Normal, Delicates or Airing**.

 The indicator light will come on to your choice.



Now press the **Start/Pause** button to start the dryer.

**WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.**

## 4. Switch Off

When you have finished using the dryer, press the **On/Off** button, to turn off the power, then switch off at the power point. It is not recommended that the power be left on to the dryer.

## 5. Clean Lint Filter

After every load clean the lint filter to reduce drying times and avoid overheating.

### Checking the Load

To check the dryness or add clothes during the cycle, simply open the door. The dryer will beep several times indicating the door is open. If further drying is required, close the door and push in the door safety switch button, then press the **Start/Pause** button to continue.

**For the best drying performance, only add or remove clothes at the beginning of the drying cycle.**

### Cooling

Your dryer will automatically switch off the heater at the end of every drying cycle. The cooling light will come on. This is important as it removes stored heat from the clothes and helps prevent creasing.

At the end of cooling the buzzer will sound to indicate your clothes are dry (unless you have de-selected this function). It will sound again after about fifteen minutes. The Clean Filter Reminder light will remain on.

The progress indicator lights let you know what the dryer is doing, either drying, cooling or finished.

### Last Memory Setting

Next time you turn your dryer on it will be ready to go as it remembers the last Program, Temperature and Option setting used. You can change the settings if you wish.

### Reversing Action

The drum is designed to rotate in both direction, clockwise and anti-clockwise. This reduces tangling and gives more even drying in a shorter time.



## Care And Cleaning



### Warning!

You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

### External Cleaning

Clean the appliance only with soap and warm water. Fully dry all the surfaces.



### Caution!

Do not use alcohol, solvents or chemical products.


### Cleaning The Water Inlet Filter

If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.

It is therefore a good idea to clean it from time to time.


#### To clean the water inlet filters:

1. Close the water tap.
2. Remove the water inlet hose from the water tap.
3. Clean the filter in the inlet hose with a stiff brush.

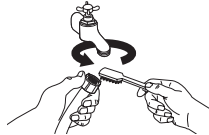


4. Remove the inlet hose behind the appliance.

5. Clean the filter in the valve with a stiff brush or a towel.

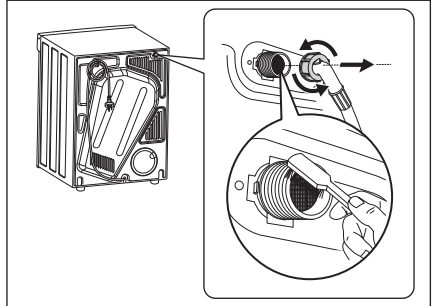

6. Re-install the inlet hose. Make sure that the couplings are tight to prevent leakages.

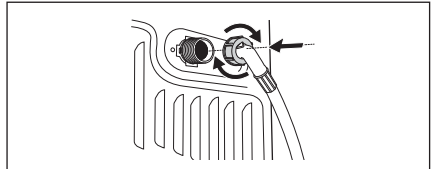

7. Open the water tap.

## Hints

- Never tumble dry the following: Delicate items such as net curtains, woollen, silk, fabric with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdown, sleeping bags, feather quilts and any item containing rubber foam or materials similar to foam rubber.
- Do not place in your dryer undergarments such as bras and corsets that contain metal reinforcements. Your dryer may be damaged if metal parts were to come loose from the garment. Place such items in a bag designed for this purpose.
- Check and empty pockets. Clips, pens, nails and pins can damage both the dryer and your clothes. Other items such as matches or cigarette lighters will cause a fire.
- Close all press studs, hooks, eyes and zips that may catch on something else. Tie all belts and apron strings to prevent tangling.
- Drying time will depend on fabric type and construction, load size and wetness. Save time and money and always spin the load as dry as possible in your washing machine.
- Drying time will also be affected by voltage fluctuations, room temperature and humidity. Clothes will dry more slowly on a cool or humid day.
- For best results, sort the load according to fabric types. Such as heavy items which may take longer to dry, eg towels, flannelette sheets etc, than ones which dry quickly, eg poly/cotton shirts and sheets.
- Avoid drying dark clothes with light coloured items such as towels as lint will show on the dark clothes.

**Note: Some fabrics will collect lint from other clothes and items. Separate the lint “givers” and the lint “collectors” to minimise this problem.**

Clothes that give lint include towels, nappies, chenille. Clothes that collect lint include corduroy, synthetics and permanent press garments.

- If individual items are still damp after drying, set a 30 minute post drying time. This will be necessary particularly for multilayered items (eg collars, pockets, etc).
- Always clean the lint filter-this will reduce drying time and save you money.
- The laundry must be thoroughly spun before tumble drying.

- Easy-care items eg shirts, should be briefly pre-spun before drying (depending on the crease resistance approximately 30 seconds)
- To avoid static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Clothes or towels containing sand or grit should be washed first.
- Due to variations in dryer load fabric texture and thickness it is possible that not all items will be dried evenly. If you experience uneven dryness on Normal Dry program please use either Extra Dry or Timer Program but be mindful of the type of fabric being dried to avoid overdrying certain types of fabric. Always follow drying instructions attached to the items intended to be dried in a clothes dryer.

To help you, here is a list of the average weights of some common laundry items.

Sheet	700 - 1000g
Tablecloth	400 - 500g
Kitchen towel	70 - 120g
Table napkin	50 - 100g
Towelling hand towel	150 - 250g
Bathrobe	1000 - 1500g
Men's shirt	200 - 300g
Pillowcase	100 - 200g
Men's pyjamas	400 - 500g
Ladies nightdress	200 - 250g
Bath towel	300 - 400g

# Troubleshooting & Accessories

## TROUBLESHOOTING

Check the points listed here **before** you call for help, and **make sure that you have followed the Important Safety Instructions on pages 2 & 3.**

<b>Problem</b>	<b>Possible causes</b>
<b>The dryer will not start:</b>	<ul style="list-style-type: none"> <li>• Plug is not firmly in socket, or power not turned on.</li> <li>• You have blown a fuse. Check the power point with another appliance.</li> <li>• You have not closed the dryer door or pushed in the door safety switch button.</li> </ul>
<b>Clothes are still wet:</b>	<ul style="list-style-type: none"> <li>• The selected drying time was insufficient. Select a longer time setting.</li> <li>• Longer time may be needed when the room temperature is 10 °C or less.</li> <li>• Check that the lint filter is not blocked.</li> <li>• Check to see that you have read all the instructions carefully.</li> <li>• Contact the Service Centre if you are still having problems. Write down the model and serial numbers and the date of purchase before you ring. The Service Centre will need this information.</li> <li>• You have used wet clothes with "Iron Aid" option.</li> <li>• The "Iron Aid" program reduces wrinkle on dry laundry only. It is not a drying program.</li> </ul>
<b>Isolated wet spots on fabrics after "Iron Aid" cycle completed.</b>	<ul style="list-style-type: none"> <li>• Water pressure too low - please check that the water pressure is between 200 kPa and 800 kPa.</li> </ul>
<b>No water goes out from Nozzle, when "Iron Aid" cycle is selected.</b>	<ul style="list-style-type: none"> <li>• The water tap is closed, please open the water tap.</li> <li>• The inlet hose is squashed or kinked, please check inlet hose connection.</li> <li>• The filter in the inlet hose is blocked, please clean the inlet hose filter. Refer to relevant paragraph in "Care And Cleaning" section.</li> <li>• The Nozzle is clogged, please contact the Service Centre.</li> <li>• Contact the Service Centre if you are still having problems.</li> </ul>
<b>Clothes are slightly damp after using "Iron Aid" cycle.</b>	<ul style="list-style-type: none"> <li>• This is Normal. Iron Aid uses moisture to reduce the wrinkle on fabrics. It is recommended to hang clothes after using this cycle.</li> <li>• If your laundry feels wet rather than slightly damp, then the household water pressure is too high. You may need to reduce pressure by installing a pressure reducing valve at Mains water connection to the household. This must be done by qualified plumber.</li> <li>• Note: High water pressure is harmful to all appliances in your household that are connected to the water supply ie: washing machine, dishwasher... etc.</li> </ul>

## IMPORTANT

To operate efficiently the clothes dryer must have an unrestricted air supply and exhaust ventilation.

**Service calls resulting from installation where ventilation is restricted are not covered by warranty.**

THE COST OF THIS TYPE OF CALL WILL BE CHARGED TO THE CUSTOMER

Should you require further instructions in the use and care of your clothes dryer please contact the CUSTOMER CARE CENTRE on the phone number listed below:

Australia....**1300 363 640 8 am to 7 pm EST & 8 pm EDST**  
Monday to Friday

NewZealand....**(09) 573 2384 8 am to 5 pm**  
Monday to Friday

If you have a warranty or spare parts enquiry you should call the number listed on page 10.

## ACCESSORIES

You can buy both the venting kits and the stacking kit (as mentioned on page 4) from your local appliance shop or Electrolux Home Products Pty.Ltd.Spare Parts Distributor.

Note



---

Product ..... Date of Purchase .....

Model ..... Serial Number .....

Purchaser's Name .....

Full Postal Address .....

.....

Retailer (Shop) .....

Address .....

Please keep this book and your Proof of Date of Purchase to show the technician if you need service during the warranty period.



FOR SALES IN AUSTRALIA AND NEW ZEALAND  
APPLIANCE: ELECTROLUX DRYER

**This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.**

1. In this warranty:
  - (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
  - (b) 'ACL' means Schedule 2 to the Competition and Consumer Act 2010;
  - (c) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
  - (d) 'ASC' means Electrolux authorised service centres;
  - (e) 'Electrolux' means Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively 'Electrolux') of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
  - (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period;
  - (g) 'Warranty Period' means the Appliance is warranted against manufacturing defects in Australia for 24 months and in New Zealand for 24 months, following the date of original purchase of the Appliance;
  - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. During the Warranty Period Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
4. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
5. To the extent permitted by law, you will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of:
  - (a) travel of an authorised representative;
  - (b) transportation and delivery of the Appliance to and from Electrolux or its ASC.

In all instances, unless the Appliance is transported by Electrolux or an Electrolux authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
  - (a) the Appliance is damaged by:
    - (i) accident
    - (ii) misuse or abuse, including failure to properly maintain or service
    - (iii) normal wear and tear
    - (iv) power surges, electrical storm damage or incorrect power supply
    - (v) incomplete or improper installation
    - (vi) incorrect, improper or inappropriate operation
    - (vii) insect or vermin infestation
    - (viii) failure to comply with any additional instructions supplied with the Appliance;
  - (b) the Appliance is modified without authority from Electrolux in writing;
  - (c) the Appliance's serial number or warranty seal has been removed or defaced;
  - (d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC.
8. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.
9. To the extent permitted by law and subject to your non-excludable statutory rights and warranties, Electrolux excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Electrolux in Australia, the Appliances come with a guarantee by Electrolux that cannot be excluded under the ACL. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act.
13. To enquire about claiming under this warranty, please follow these steps:
  - (a) carefully check the operating instructions, user manual and the terms of this warranty;
  - (b) have the model and serial number of the Appliance available;
  - (c) have the proof of purchase (e.g. an invoice) available;
  - (d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

### Important Notice

Before calling for service, please ensure that the steps listed in clause 13 above have been followed.

<p><b>FOR SERVICE</b> or to find the address of your nearest state service centre in Australia <b>PLEASE CALL 13 13 49</b> For the cost of a local call (Australia only)</p>	<p><b>SERVICE AUSTRALIA</b>  <b>Electrolux</b> ELECTROLUX HOME PRODUCTS www.electrolux.com.au</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest state spare parts centre in Australia <b>PLEASE CALL 13 13 50</b> For the cost of a local call (Australia only)</p>
<p><b>FOR SERVICE</b> or to find the address of your nearest authorised service centre in New Zealand <b>FREE CALL 0800 10 66 10</b> (New Zealand only)</p>	<p><b>SERVICE NEW ZEALAND</b>  <b>Electrolux</b> ELECTROLUX (NZ) Limited www.electrolux.co.nz</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest state spare parts centre in New Zealand <b>FREE CALL 0800 10 66 20</b> (New Zealand only)</p>

[www.electrolux.com/shop](http://www.electrolux.com/shop)



808116304-001-032014